Water Heater

***Thermo Top E* Parking Heater** e1 00 0003

***Thermo Top C* Parking Heater** e1 00 0002

***Thermo Top P* Parking Heater** e1 00 0104

Installation documentation

Skoda Octavia

1.2 and 1.4 TSI
from Model Year 2009
Left-hand drive vehicle
Manual transmission



WARNING!

Hazard warning:

Incorrect installation or repair of Webasto heating systems may cause a fire or result in the emission of carbon monoxide, which can be fatal. Serious or fatal injuries can be caused as a result.



Specialist company training, technical documentation, specialised tools and equipment are required to install and repair Webasto heating and cooling systems.
Only original Webasto parts must be used. For this, also see the catalog of air and water heater accessories from Webasto.

NEVER attempt to install or repair Webasto heating or cooling systems if you have not successfully completed the company training and thereby acquired the required technical skills, or if you do not have access to the required technical documentation, tools and equipment needed to carry out correct installation and repairs.

ALWAYS follow all Webasto installation and repair instructions and observe all warnings.

The initial startup is to be executed with the Webasto Thermo Test Diagnosis.

Webasto does not accept any liability for defects and damage that are attributable to installation by untrained staff.

Ident. No.: 1314751D_EN Fee Euro 10.00
© Webasto AG

Table of Contents

Validity 2
Heater / Installation Kit 3
Foreword 3
General Instructions 3
Special Tools 3
Explanatory Notes on Document 4
Preliminary Work 5
Heater installation location 5
Electrical system 6
Fuse holder and K3 relay 7
Climatic fan controller 8
Climatronic fan controller 9
Digital timer 12
Remote option Telestart 12
Premounting heater 13
Preparing installation location 14
Installing heater 15
Fuel Connection 16
Coolant circuit 19
1.2 TSI 20
1.4 TSI 22
Exhaust gas 26
Final Work 27
Operating Instructions for End Customer 28

Validity

Manufacturer	Model	Type	EG-BE No./ABE
Skoda	Octavia	1Z	e11 * 2001/116 * 0230 * ...

Engine type	Engine model	Output in kW	Displacement in cm³
CBZB	Petrol TSI	77	1197
CAXA	Petrol TSI	90	1390

Vehicle and engine types, equipment variants and national specifications not listed in these installation instructions have not been tested. However, installation according to this installation documentation may be possible.

The installation location of a digital timer and summer/winter switch should be confirmed with the end customer before installation.

Heater / Installation Kit

Quantity	Description	Order No.:
1	Retail accessories *Thermo Top E / C / P*	See Price list
1	Installation Kit Skoda Octavia 2009 1.2 and 1.4 TSI manual transmission	1314750B
1	Heater control	See Price list

Also required with Climatronic

Quantity	Description	Order No.:
1	Climatronic kit	9013645A

Heater recommended for the respective vehicle class:

Vehicle	Heater
Compact car	Thermo Top E
Mid-size car, estate car	Thermo Top C
Full-size car, van, Offroader	Thermo Top P

The selection of the heater is based on the passenger compartment size of the vehicle and the level of comfort required by the customer!

Foreword

This installation documentation applies to Skoda Octavia vehicles 1.2 and 1.4 TSI - for validity, see page 2 - from model year 2009 and later, assuming technical modifications to the vehicle do not affect installation, any liability claims excluded. Depending on the vehicle version and equipment, modifications may be necessary during installation with respect to this installation documentation.

However, the stipulations in this "installation documentation" and the "operating and maintenance instructions" for the *Thermo Top C/E* /P must always be observed.
The corresponding rules of technology and any information from the vehicle manufacturer should be observed during the installation work.

General Instructions

Installation should be carried out according to the general, standard rules of technology. Unless specified otherwise, fasten hoses, lines and wiring harnesses to original vehicle lines and wiring harnesses using cable ties.
Sharp edges should be fitted with rub protection (split-open plastic hose).
Spray unfinished body areas, e.g. drilled holes, with anti-corrosion wax (Tectyl 100K, Order No. 111329).

Special Tools

- Torque wrench for 2.0 - 10 Nm
- Hose clamping pliers
- Unlocking tool

Explanatory Notes on Document

To provide you with a quick overview of the individual working steps, you will find an identification mark on the outside top right corner of the page in question.

Mechanical system

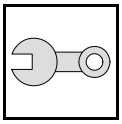

Electrical system

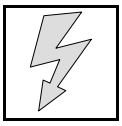

Coolant circuit



Fuel

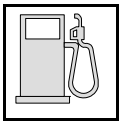

Exhaust gas



Combustion air

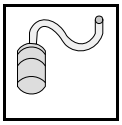

Special features are highlighted using the following symbols:



Specific risk of injury or fatal accidents.



Specific risk of damage to components.



Specific risk of fire or explosion.



Reference to general installation instructions of Webasto components or to the manufacturer's vehicle-specific documents.



Reference to a special technical feature.



The arrow in the vehicle icon indicates the position on the vehicle and the viewing angle.

All dimensions are in mm!
Tightening torque of hose clamps = 2.0 + 0.5 Nm!
Tightening torque of Ejot screws, Ejot studs = 10 Nm!

Preliminary Work

Warning!

- Open the fuel tank cap, ventilate the tank.
- Close the fuel tank cap again.
- Depressurise the cooling system.
- Copy the factory number from the original type label to the duplicate type label.
- Remove years that do not apply from the duplicate label.
- Attach the duplicate label (type label) in the appropriate place.
- Disconnect the battery "earth" or "ground" connection.
- Remove the battery
- Remove the battery carrier
- Remove the air cleaner housing.
- Remove the windscreen wiper.
- Remove the coolant reservoir cap.
- Remove the resonator.
- Remove the left-hand headlight.
- Remove the left front wheel
- Remove the front section of the left front wheel well trim
- Remove the underride protection
- Remove the right-hand underbody trim
- Remove the rear bench seat
- Open the tank-fitting service lid.
- Remove the footwell trim on the driver's side
- Remove the lower instrument panel trim on the driver's side
- Remove the footwell trim on the driver's side (Only with Climatronic).

Remove page 28 "Operating Instructions for End Customer" and add to the vehicle operating instructions.

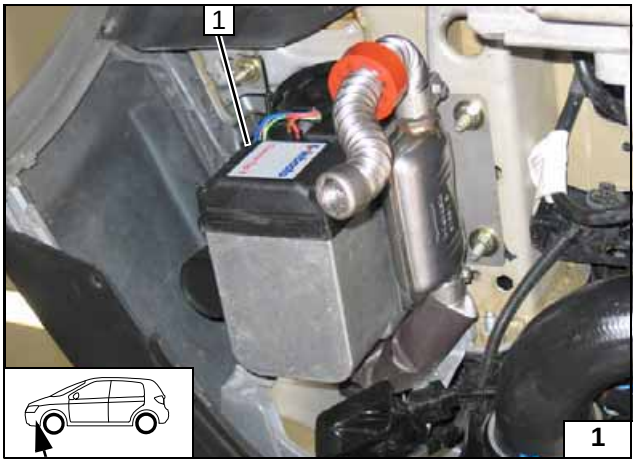

Heater installation location

1 Heater

Installation location

Electrical system

Wiring harness routing

Route excess lengths from wiring harness of heater **1** in cable duct below battery and secure with cable ties.

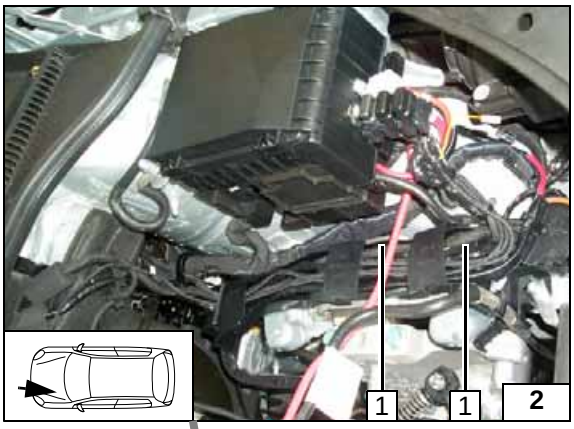

Wiring harness pass through in engine compartment

1 Original vehicle wiring harness pass through
2 Wiring harnesses for fan controller and heater control

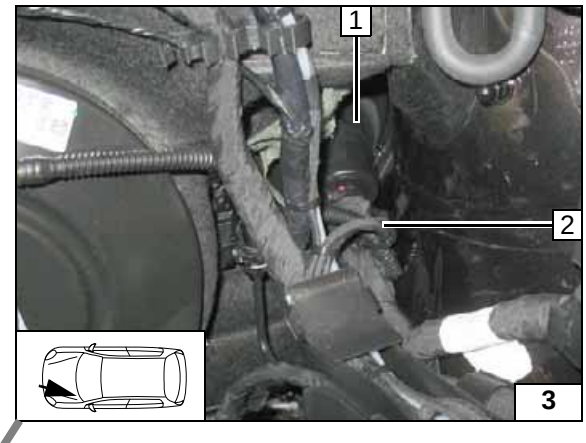

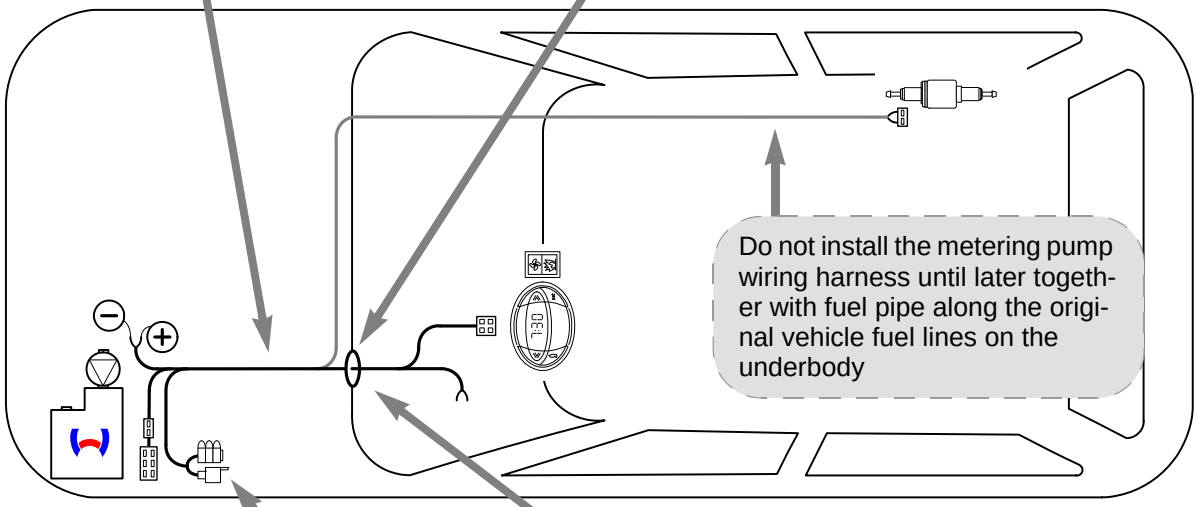

Wiring harness routing diagram

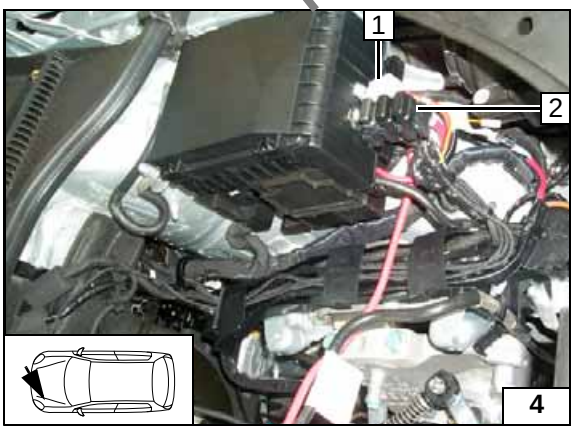

Fuse holder, K3 relay

Description of installation for K3 relay **1** and fuse carrier **2** on Page 7

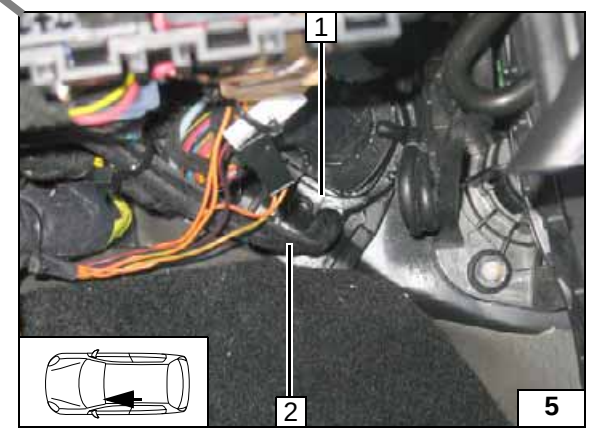

Wiring harness pass through of passenger compartment

1 Original vehicle wiring harness pass through
2 Wiring harnesses for fan controller and heater control

Fuse holder and K3 relay

Holes for fuse holder and K3 relay

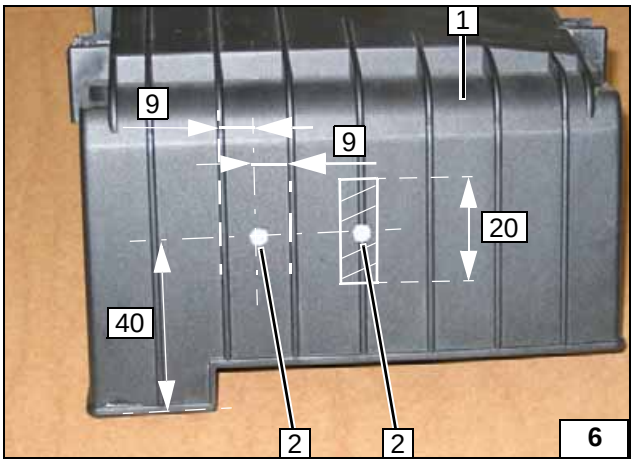

Cut away bar in shaded area.

1 Cover of fuse/relay carrier in engine compartment
2 5.0 mm dia. hole [2x]

Installing fuse holder and K3 relay

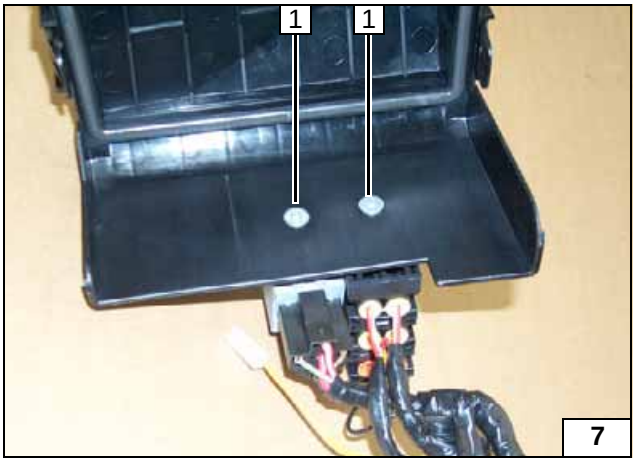

1 M5x12 countersunk head screw [2x]

Installing fuse holder and K3 relay

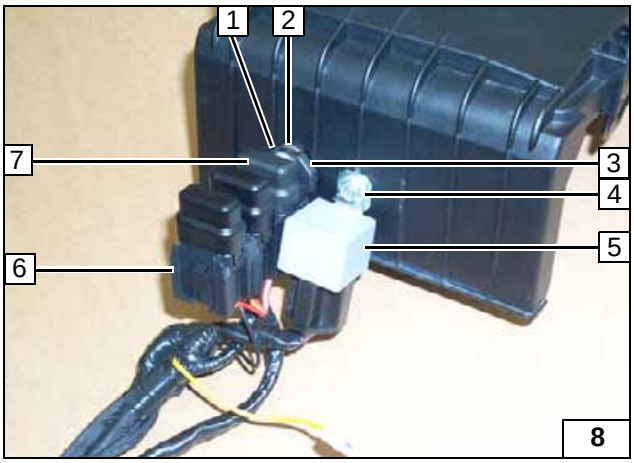

On vehicles with Climatronic, replace 25 A fuse F3 **7** with provided 5A fuse.

1 M5 flanged nut
2 Large diameter washer (between cover and retaining plate)
3 Retaining plate
4 M5 flanged nut
5 K3 relay
6 Fuse holder

Connecting positive and earth wire

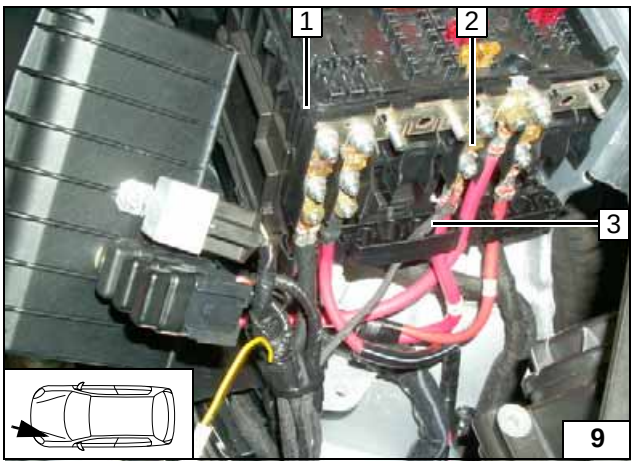

Route brown (br) earth wire to original vehicle earth support point below headlight and connect.

1 Fuse/relay carrier
2 Original main vehicle fuse
3 Red (rt) positive wire

Climatic fan controller

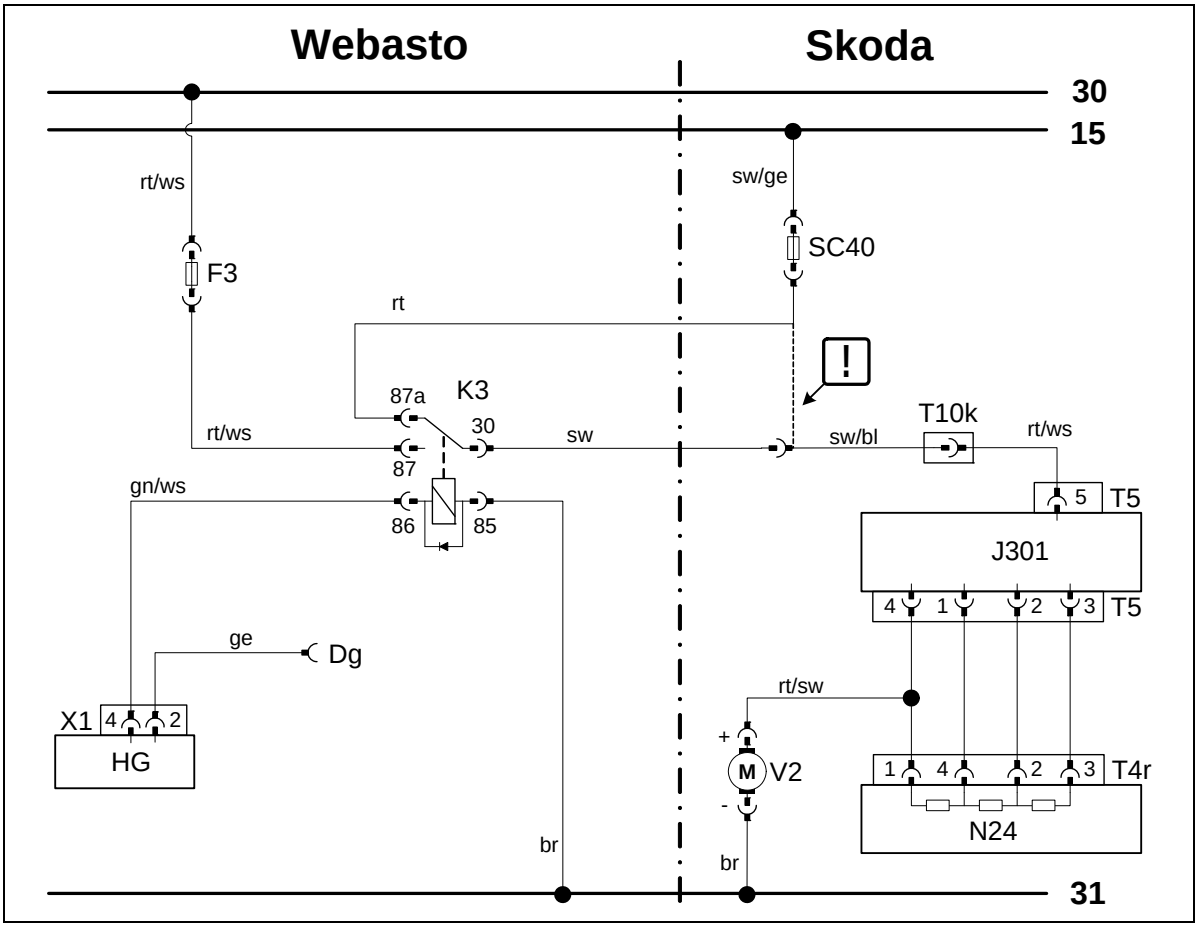

Webasto components		Vehicle components		Colours and symbols	
HG	Heater TT-C/E/P	SC40	40 A fan fuse	rt	red
X1	6-pin heater connector	J301	Control unit of air conditioning	ws	white
F3	25 A fuse F3	N24	Resistor group	sw	black
K3	Fan relay	V2	Fan motor	br	brown
Dg	Diagnosis connection			gn	green
				ge	yellow
				bl	blue
				!	Detach wire end from SC40.
				Wiring colours may vary.	

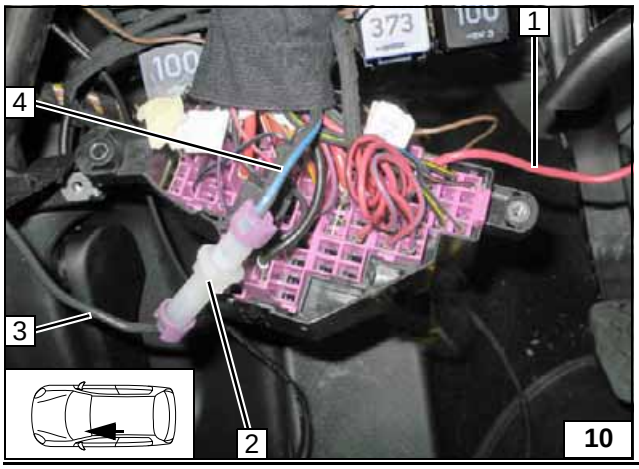

Connection on original vehicle fuse carrier (instrument panel at upper left). Detach black/blue (sw/bl) 4² wire **4** on fuse output SC40. Produce connection as shown in wiring diagram.

1 Red (rt) wire of K3/87a engaged in fuse output SC40
2 AMP housing
3 Black (sw) wire to K3/30

Climatic wiring diagram

Legend

Fan controller

Climatronic fan controller

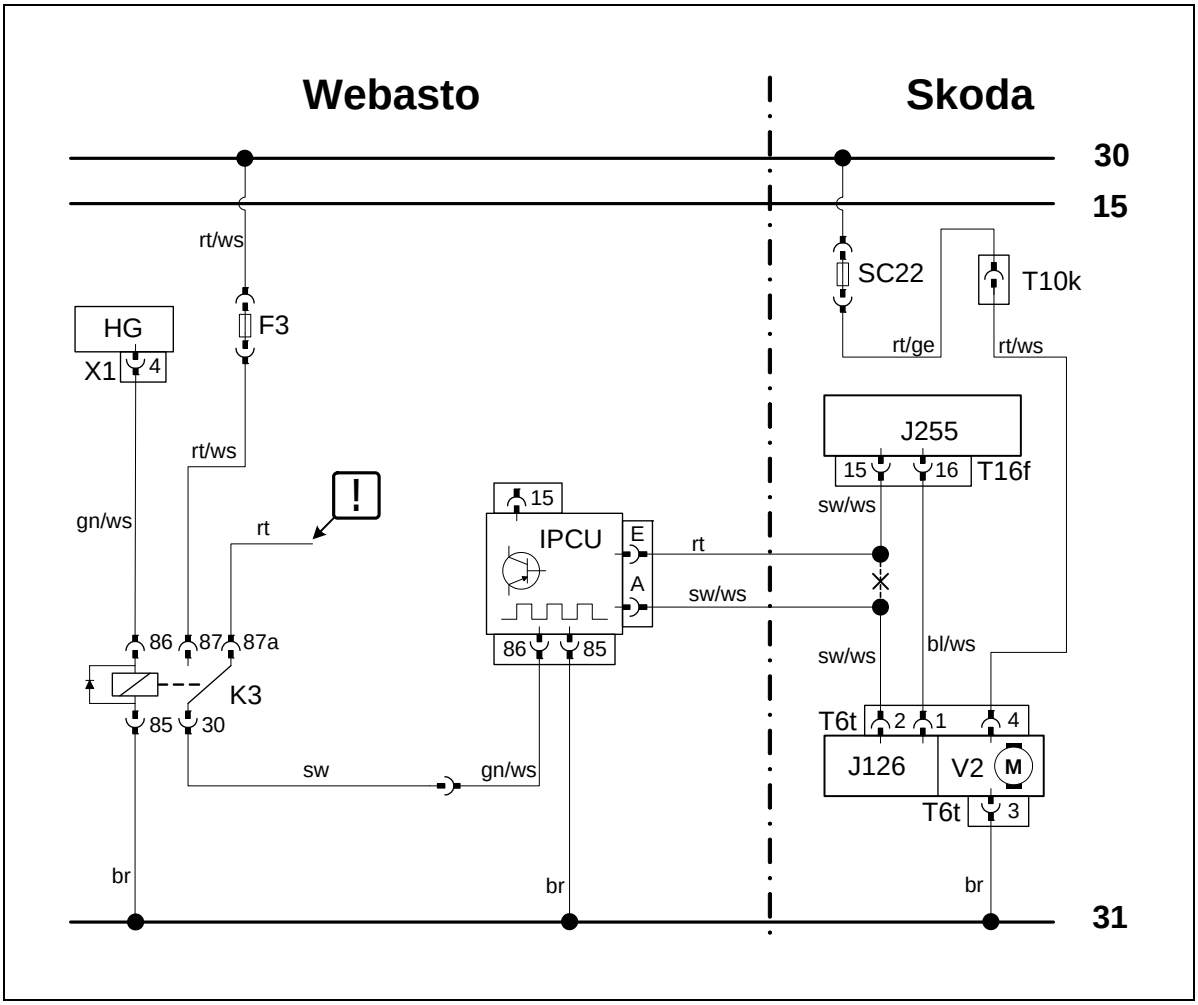

Webasto components		Vehicle components		Colours and symbols	
HG	Heater TT-C/E/P	SC22	40 A fan-fuse	rt	red
X1	6-pin heater connector	J255	Climatronic control unit	ws	white
F3	Replace 25 A fuse F3 with 5A fuse.	V2	Fan motor	sw	black
		J126	Fan control unit	br	brown
K3	Fan relay			gn	green
IPCU	Pulse width modulator			ge	yellow
				bl	blue
				X	Cutting point
				!	Insulate wire ends and tie back
				Wiring colours may vary.	

Climatronic wiring diagram

Legend

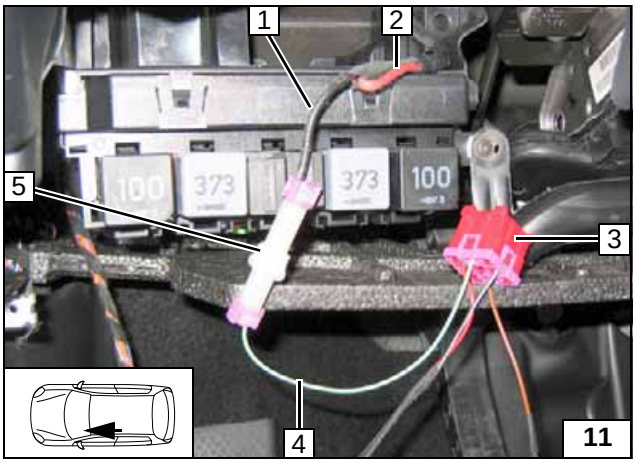

Produce connections as shown in wiring diagram. Insulate red (rt) wire **2** from K3/87a and tie back.

1 Black (sw) wire to K3/30
3 Socket of IPCU module
4 Green/white (gn/ws) wire of IPCU/86
5 AMP connector

Preparing IPCU

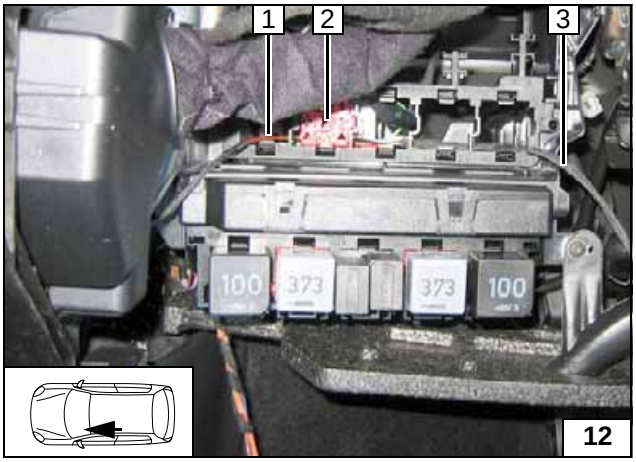

Position of free socket dependent on vehicle equipment.

1 Brown (br) wire of IPCU/85
2 Socket for IPCU module mounted
3 IPCU wiring harness

Preparing IPCU

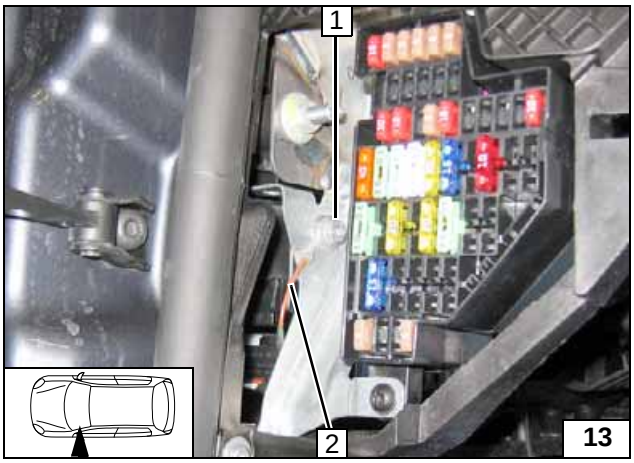

1 Original vehicle bolt
2 Brown (br) wire of IPCU/85

Earth connection of IPCU

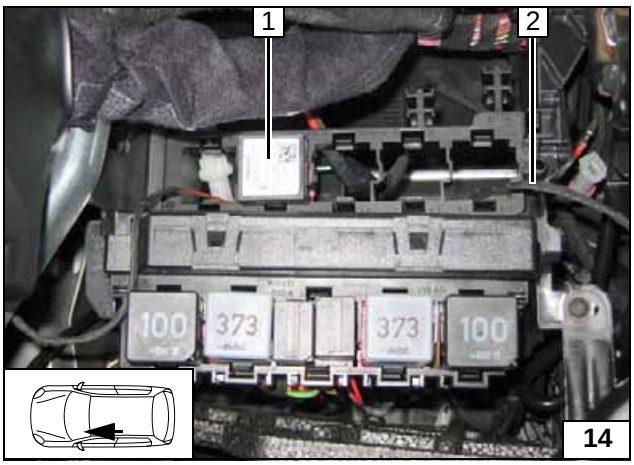

Route wiring harness from IPCU module **2** along air duct to centre console.

1 Connect IPCU

Routing wiring harness

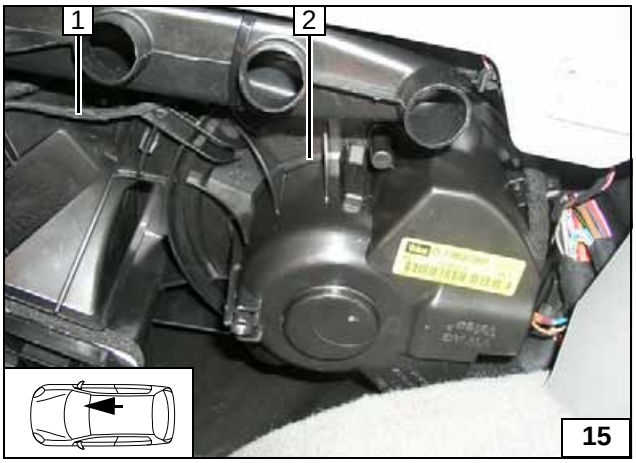

Route wiring harness from IPCU module along original vehicle wires to fan unit.

1 IPCU wiring harness
2 Fan unit

Detaching fan unit

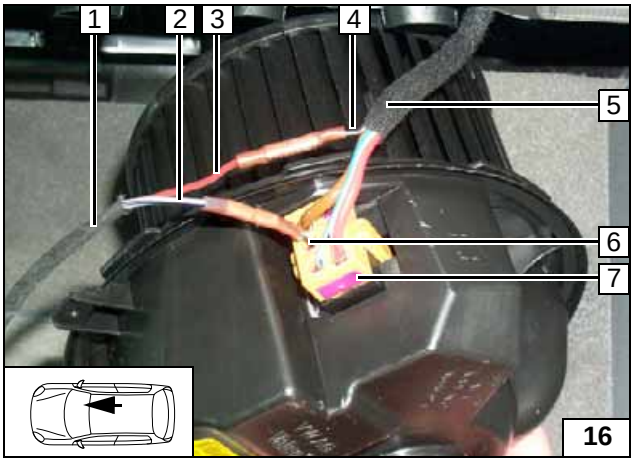

Disconnect fan unit.
Produce connections as shown in wiring diagram.

1 IPCU wiring harness
2 Black/white (sw/ws) wire of IPCU/A
3 Red (rt) wire of IPCU/E
4 Black/white (sw/ws) wire of Climatronic control unit
5 Original vehicle wiring harness
6 Black/white (sw/ws) wire of connector T6t/2
7 Connector T6t

Connection to fan unit

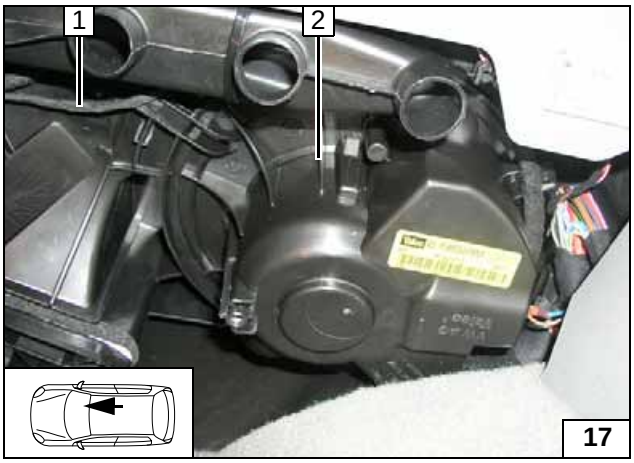

Reinstall fan unit **2**.

1 IPCU wiring harness

Installing fan unit

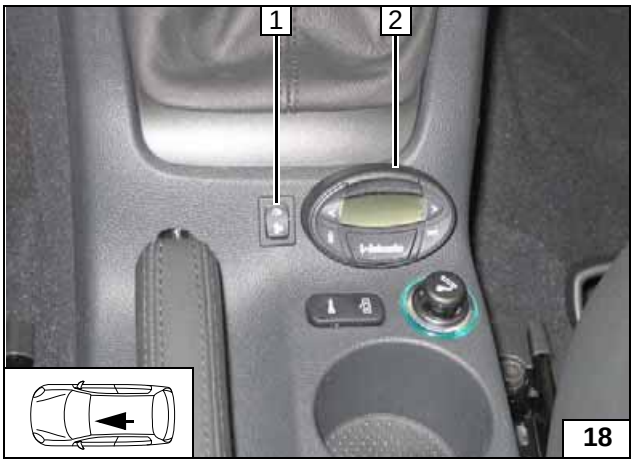

Digital timer

1 Summer/winter switch
2 Digital timer

Installing digital timer

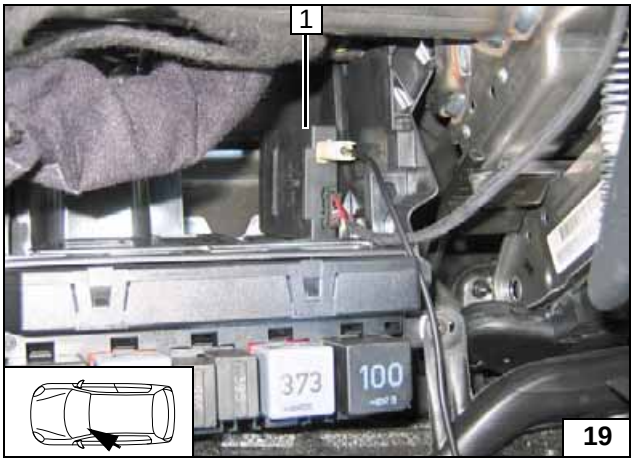

Remote option Telestart

Fasten receiver **1** with double-sided adhesive tape.

Installing receiver

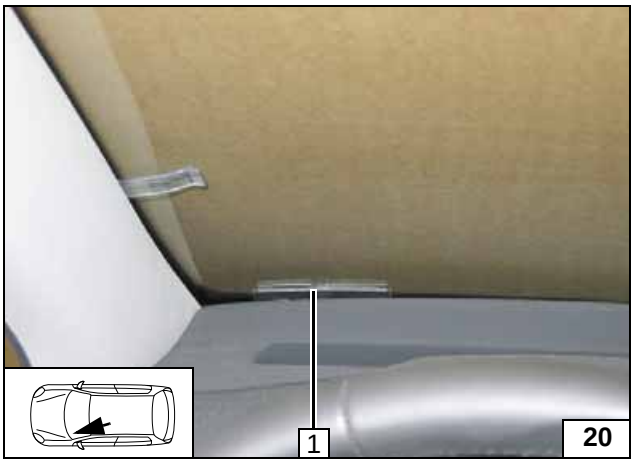

1 Antenna

Gluing on antenna

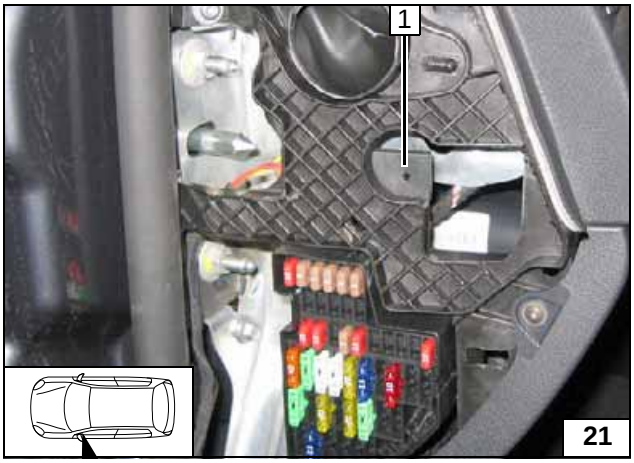

Temperature sensor T100 HTM

Fasten temperature sensor **1** with double-sided adhesive tape.

Installing temperature sensor

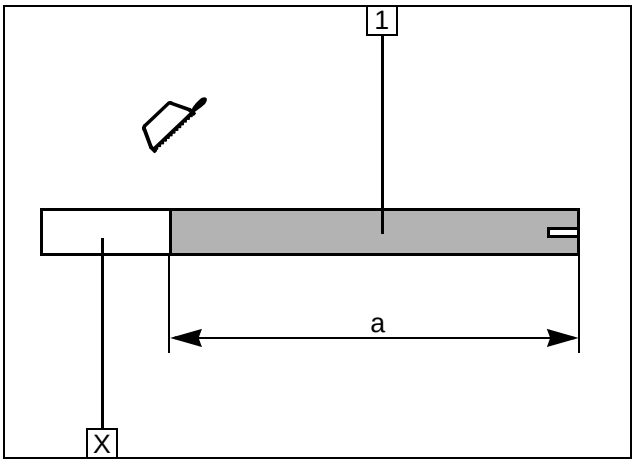

Premounting heater

1 Combustion air pipe
a = 250

Discard section **X**

Cutting combustion air pipe to length

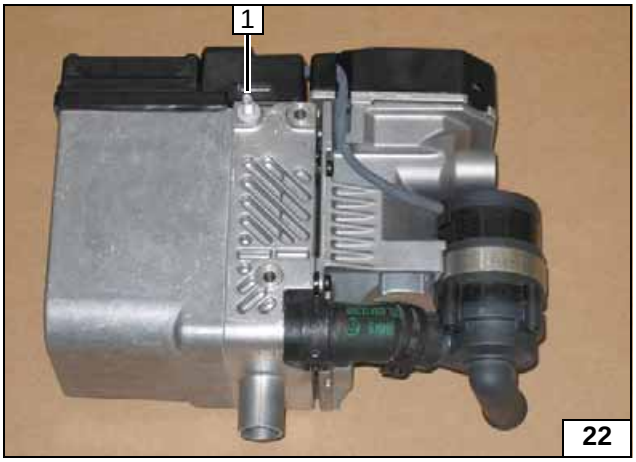

Ejot stud, tightening torque 10 Nm.

1 Ejot stud

Premounting heater

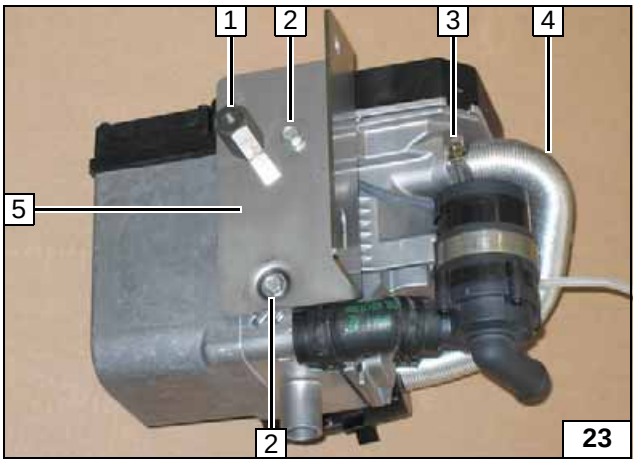

Insert one plain washer each between heater and bracket at positions **2**

1 M6x30 spacer nut
2 Washer, Ejot screw [2x]
3 27 mm dia. clamp
4 Prepared combustion air pipe (slotted side on heater)
5 Bracket

Premounting heater

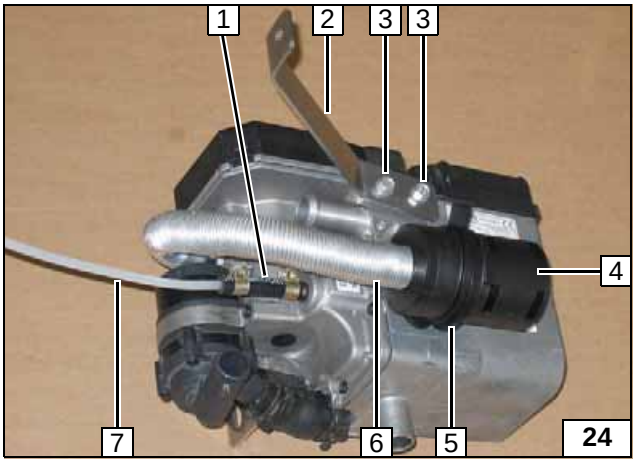

1 Hose section, 10 mm dia. clamp [2x]
2 Strut
3 Ejot screw [2x]
4 Combustion-air intake silencer
5 Retaining clip in hole of heater
6 Combustion air pipe
7 Fuel line

Premounting heater

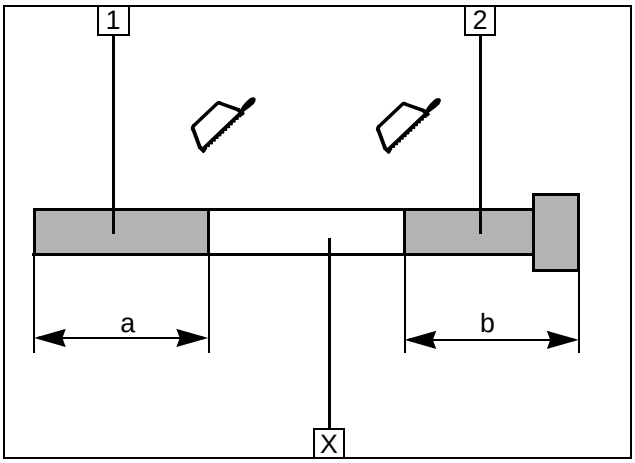

1 Exhaust pipe
a = 190
2 Exhaust end section
b = 240

Discard section **X**

Cutting exhaust pipe to length

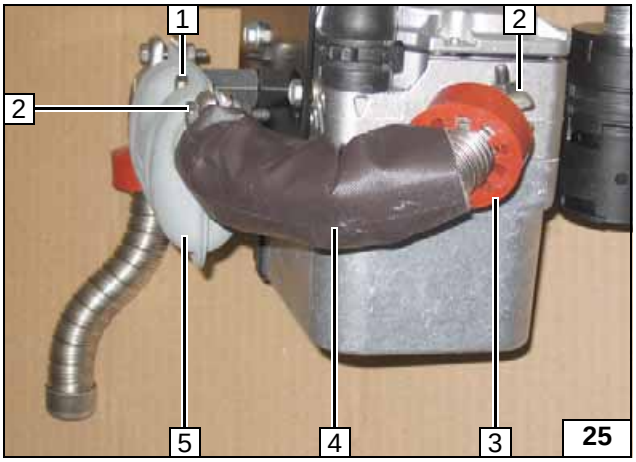

1 M6x16 bolt, spring lockwasher
2 Hose clamp [2x]
3 Red (rt) rubber isolator, without groove
4 Exhaust pipe with insulation
5 Silencer

Premounting exhaust system

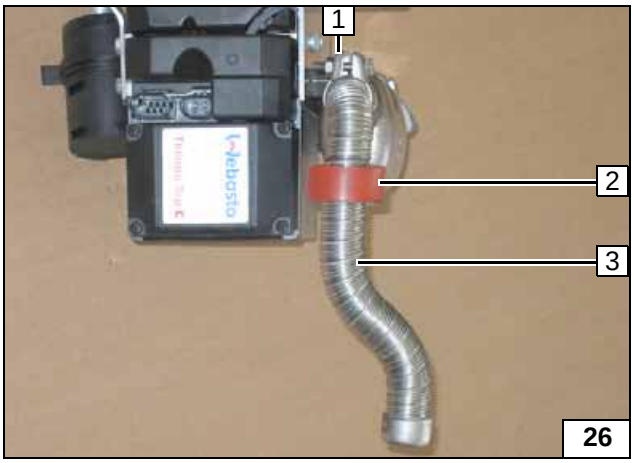

1 Hose clamp
2 Red (rt) rubber isolator, without groove
3 Exhaust end section

Premounting exhaust system

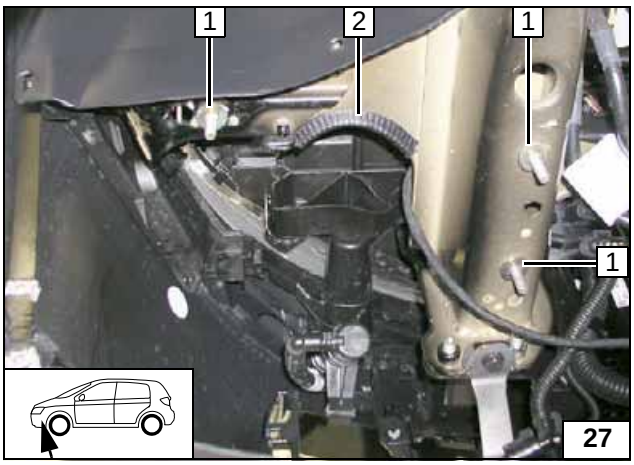

Preparing installation location

Secure large diameter washer against falling with putty etc.

1 Large diameter washer on original vehicle stud bolt [3x]
2 Edge protection section

Preparing installation location

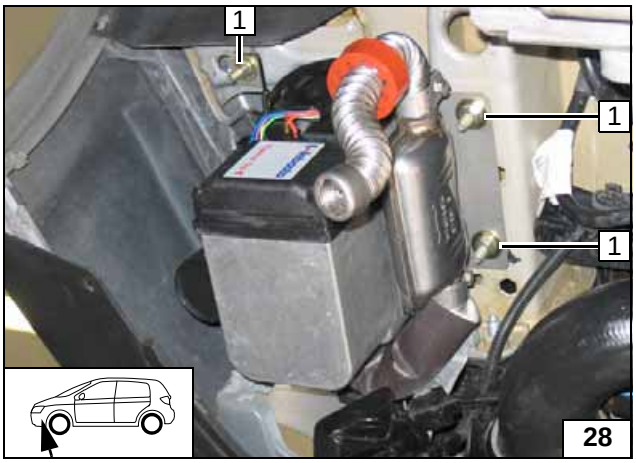

Installing heater

1 Large diameter washer, flanged nut M8 [3x]

Installing heater

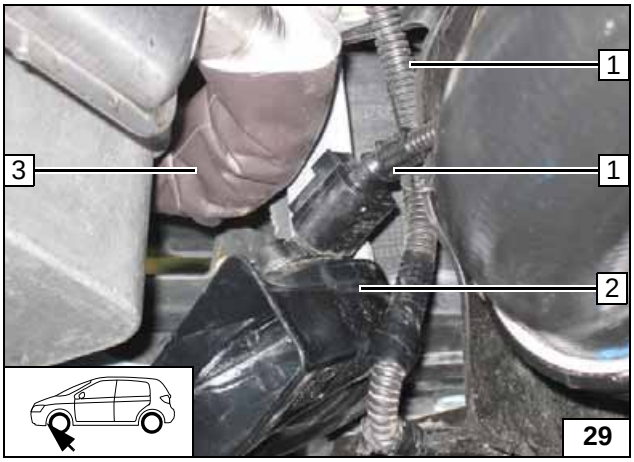

Ensure freedom of movement of exhaust system relative to original vehicle component and lines.

1 Original vehicle wiring harnesses (secured with cable ties)
2 Horn
3 Exhaust pipe

Aligning exhaust system

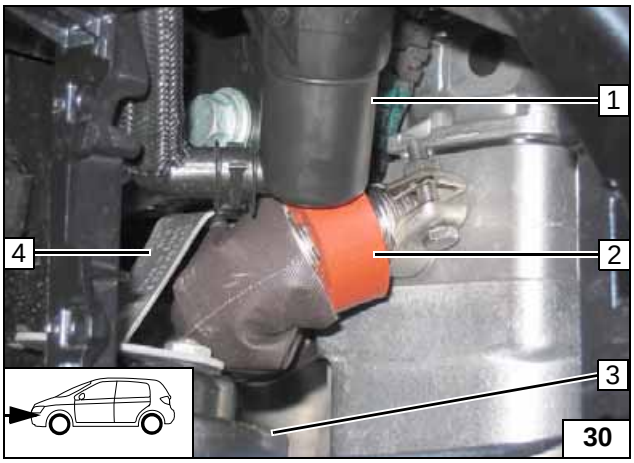

Ensure freedom of movement of exhaust system relative to original vehicle component and lines.
Position rubber isolator **2**.

1 Headlight washer system
3 Horn
4 Horn bracket

Aligning exhaust system

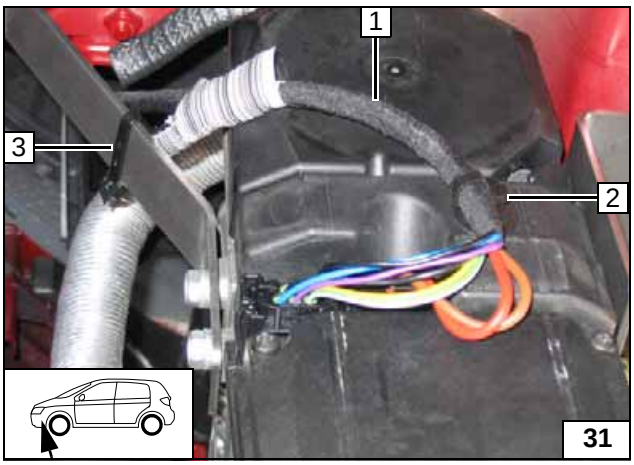

Watch routing of wiring harness. Danger of rubbing!

1 Wiring harness of heater
2 Clip cable tie in pre-perforated hole of heater cover
3 Cable tie

Mounting and routing wiring harness

Fuel Connection

CAUTION!
Open the vehicle's fuel tank cap, ventilate the tank and then re-close the tank lock.

Catch any fuel running off with an appropriate container.

Install fuel line and metering-pump wiring harness so that they are protected against stone impact. Unless specified otherwise, always fasten using cable ties.
Mount the fuel line and wiring harness with rub protection on sharp edges.

WARNING!
The fuel line and wiring harness are routed to the metering pump in as shown in the wiring harness routing diagram.

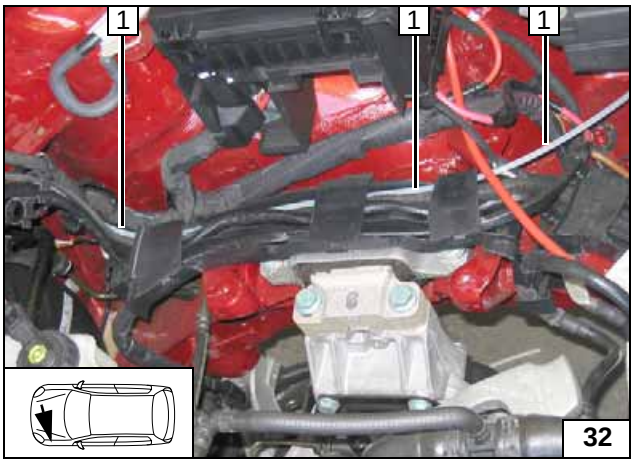

1 Fuel line

Routing to firewall

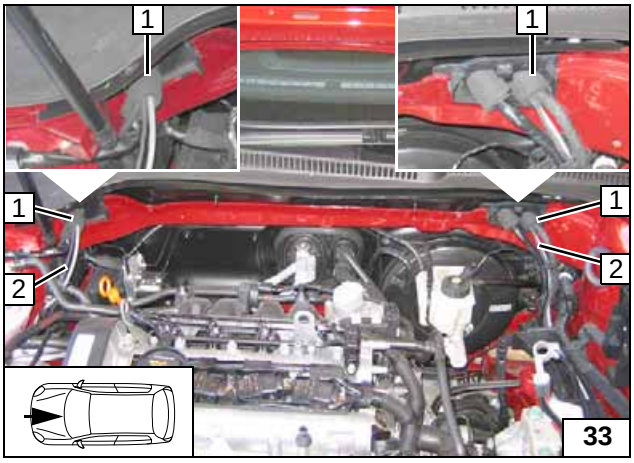

Route fuel line and wiring harness of metering pump **2** in coolant reservoir to right and fasten on original vehicle lines with cable ties. Pay particular attention to freedom of movement of wiper linkage.
Route fuel line and wiring harness of metering pump to underbody in wiring duct.

2 Existing pass through [2x]

Routing in coolant reservoir

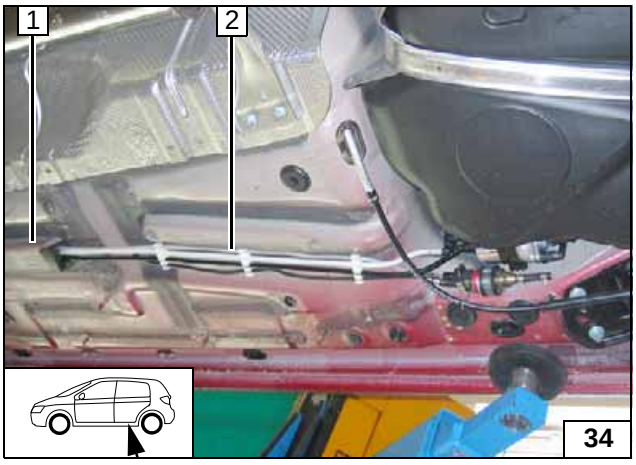

Route fuel line and wiring harness of metering pump along original vehicle fuel lines **2** to fuel tank.

1 Line duct

Routing fuel line and wiring harness of metering pump

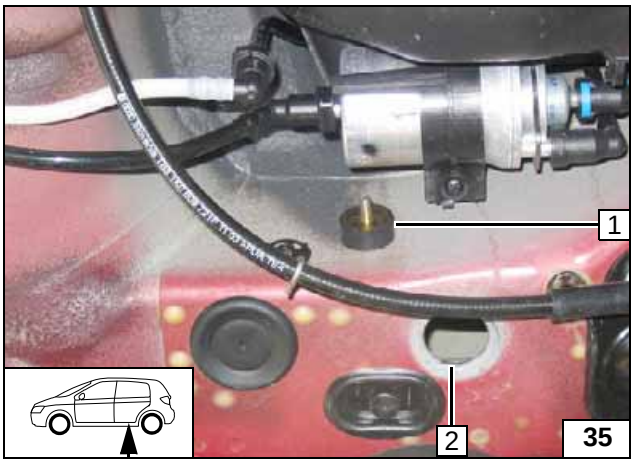

1 Silent block, large diameter washer, M6 flanged nut
2 Remove sealing plug

Installing silent block

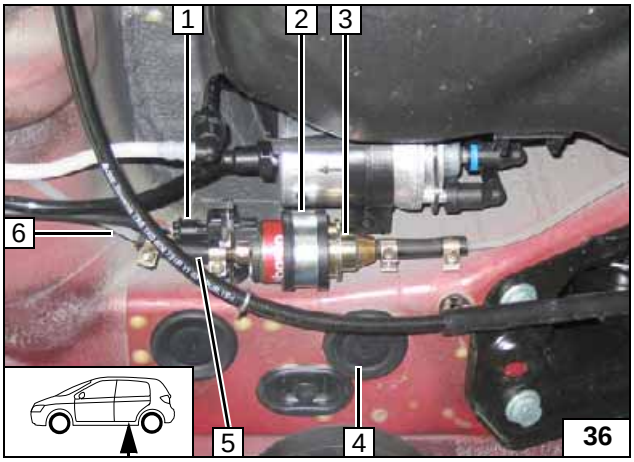

1 Wiring harness of metering pump, connector mounted
2 Secure rubber-coated p-clamp on silent block with flanged nut
3 Metering pump
4 Plug remounted
5 Hose section, 10 mm dia. clamp [2x]
6 Fuel line

Installing metering pump

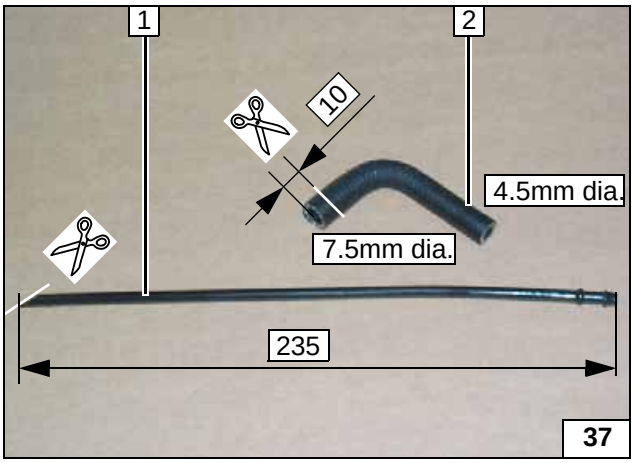

1 Standpipe
2 Moulded hose

Cutting standpipe and moulded hose to length

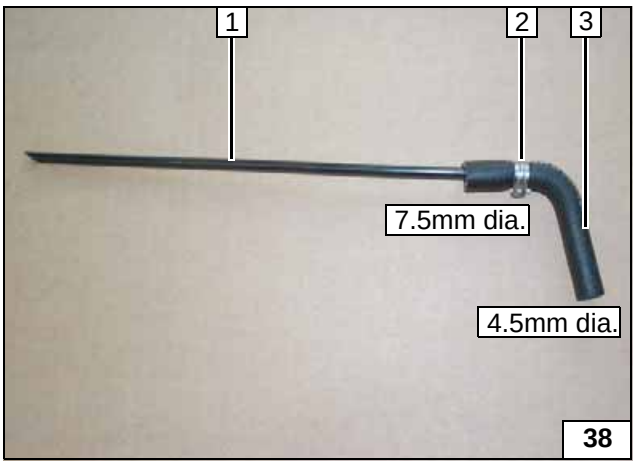

10 mm dia. Caillau clamp **2** in centre between beads on end of standpipe.

1 Standpipe
3 Moulded hose

Premounting standpipe and moulded hose

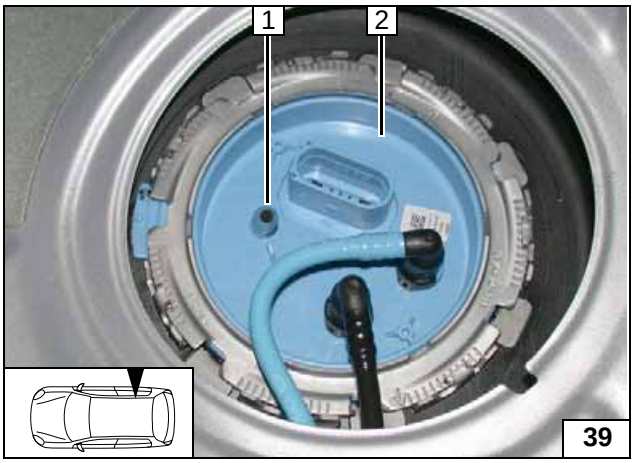

1 Tip of blind plug shortened by 3 mm
2 Fuel-tank sending unit

Cutting off blind plug

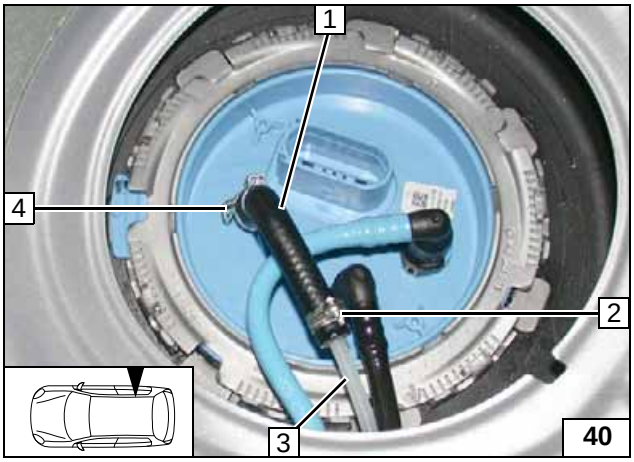

Should the standpipe be slightly curved on delivery, then it must be aligned so that the end points toward the rear right.
Otherwise there is a danger of the fuel gauge being impaired.

1 Preassembled moulded hose with standpipe
2 10 mm dia. clamp
3 Fuel line
4 13.5 mm dia. clamp

Connection to fuel-tank sending unit

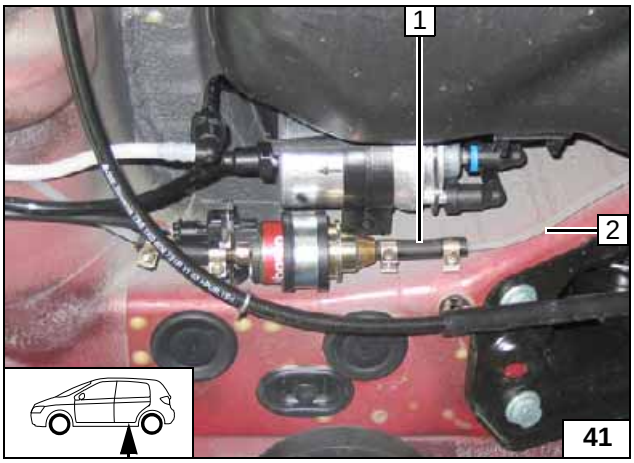

1 Hose section, 10 mm dia. clamp [2x]
2 Fuel line from fuel-tank sending unit

Connecting intake side of metering pump

Coolant circuit

WARNING!
Any coolant running off should be collected using an appropriate container. Install hoses so that they are kink-free. Unless specified otherwise, always fasten using cable ties. Position clamps so that no other hose can be damaged! When installing the hoses, the heater must be filled with coolant.
The connection should be "inline" based on the following diagram:

Hose routing diagram

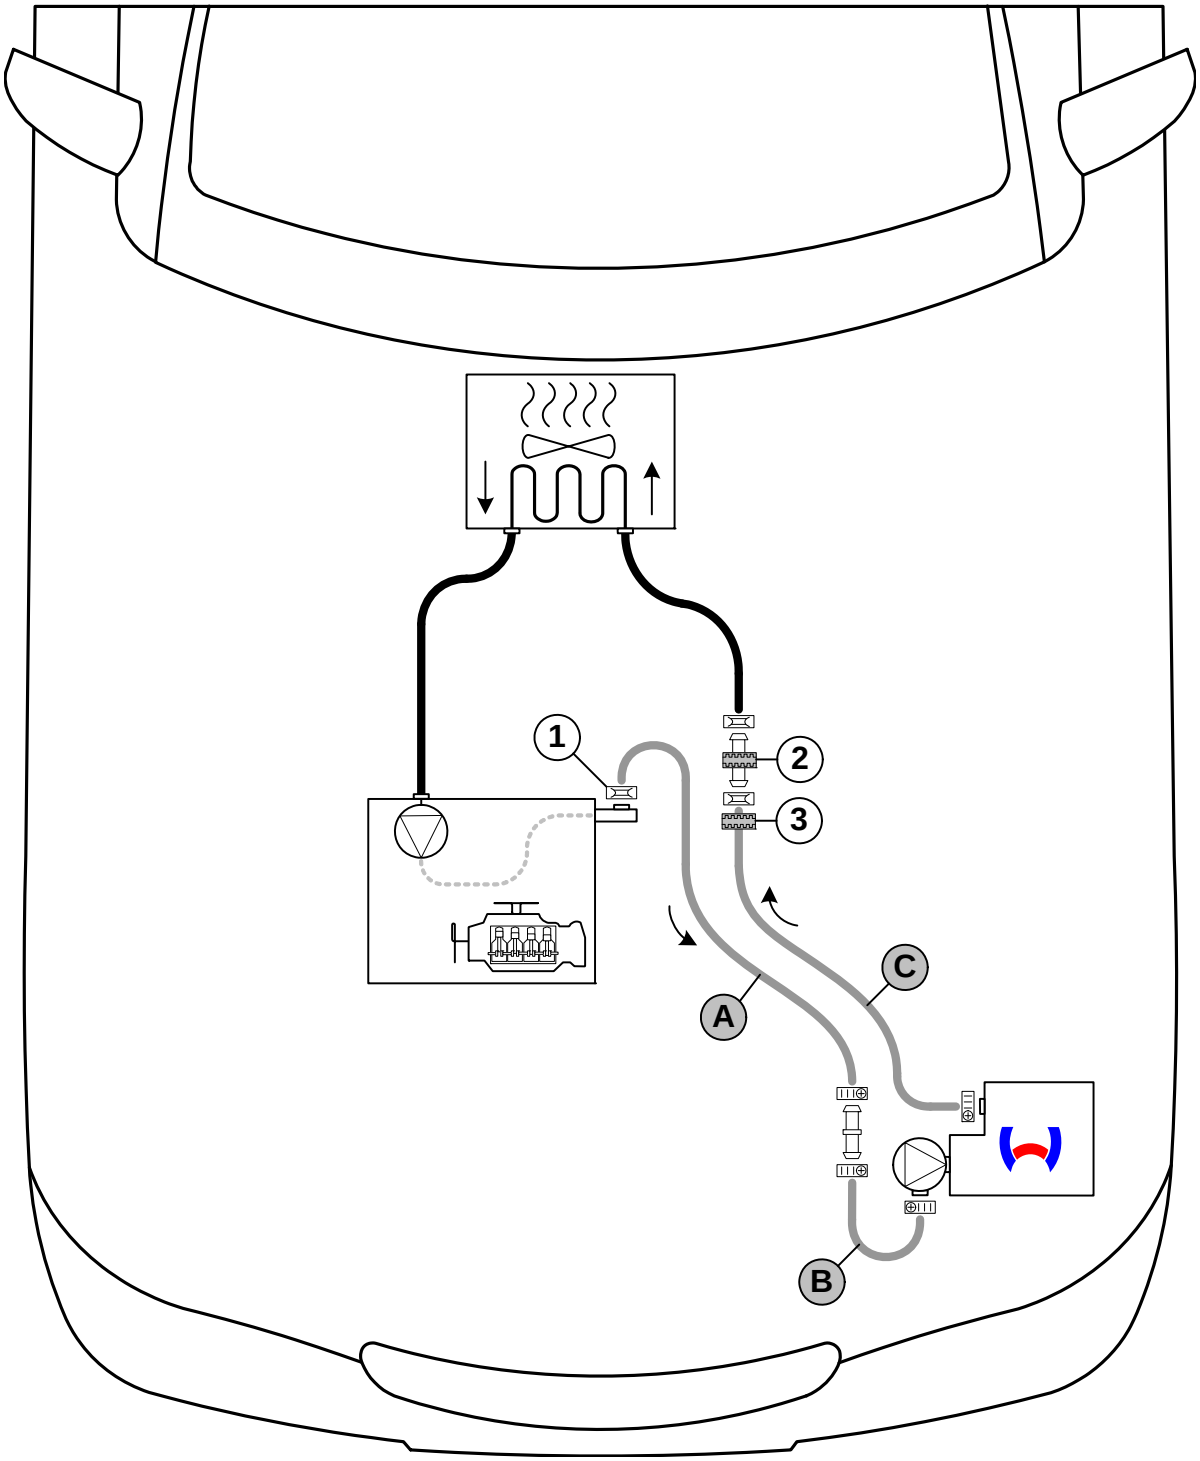

All spring clips without a specific designation = 27 mm dia. **1** = Original vehicle spring clip .
All hose clamps = 20-27 mm dia.! All connecting pipes = 20x20 mm dia.
2 = Black (sw) rubber isolator (only for 1.2 TSI) .
3 = Black (sw) rubber isolator (only for 1.4 TSI) .

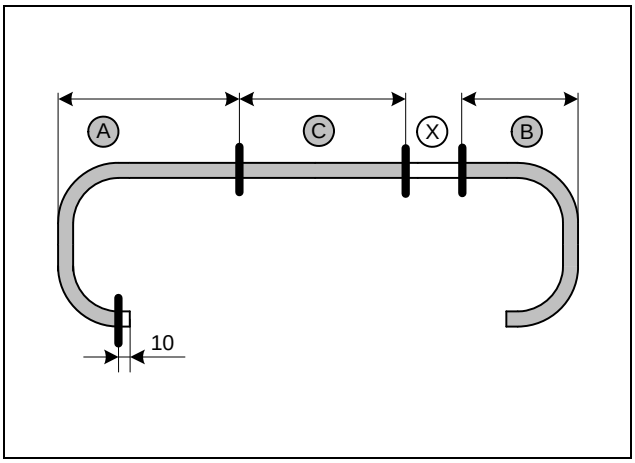

1.2 TSI

Discard section **X**.

A = 750
B = 120
C = 900

Cutting hoses to length

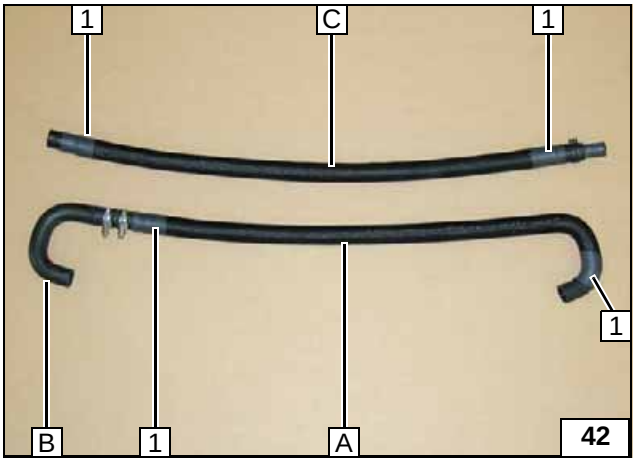

Push braided protection hoses onto hose **A** and **C**, cut to length and shrink.

1 Heat shrink plastic tubing [4x]

Premounting hoses

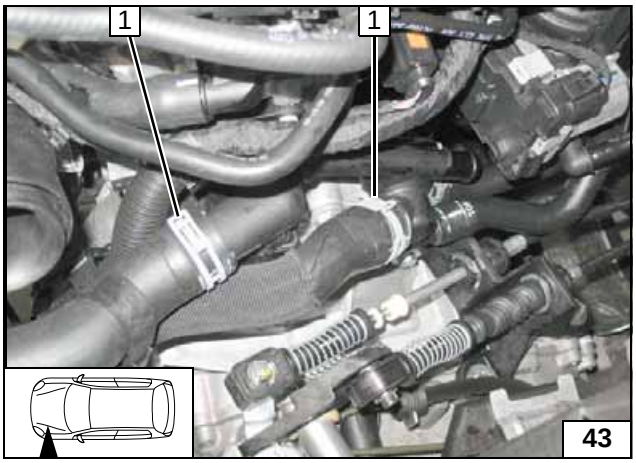

Rotate clamp lock **1** [2x] of engine!

Turning clamps

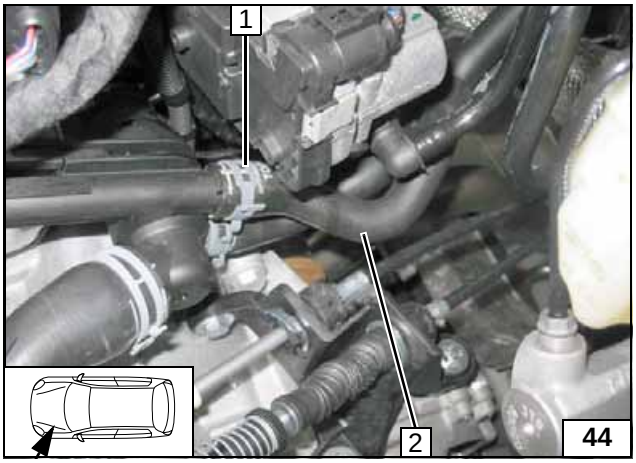

Pull off hose on engine outlet / heat exchanger inlet **2** on connection piece of engine outlet. Spring clip **1** will be reused.

Cutting point

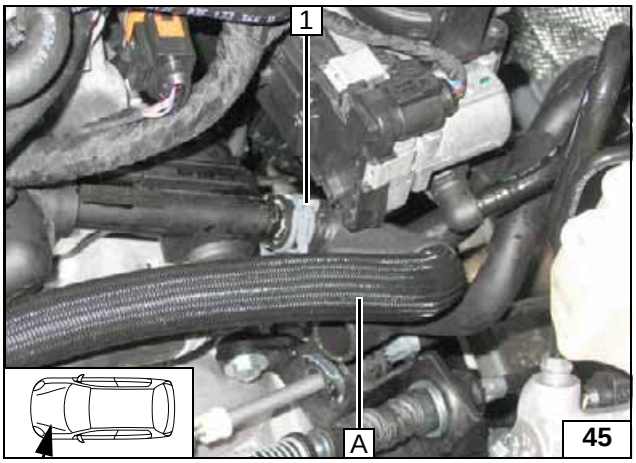

Install hose **A** to 180° elbow on connection piece of engine outlet.

1 Original vehicle spring clip

Connecting engine outlet

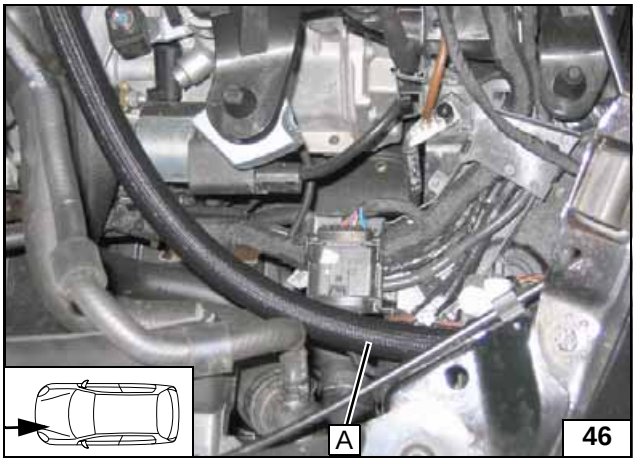

Routing in engine compartment

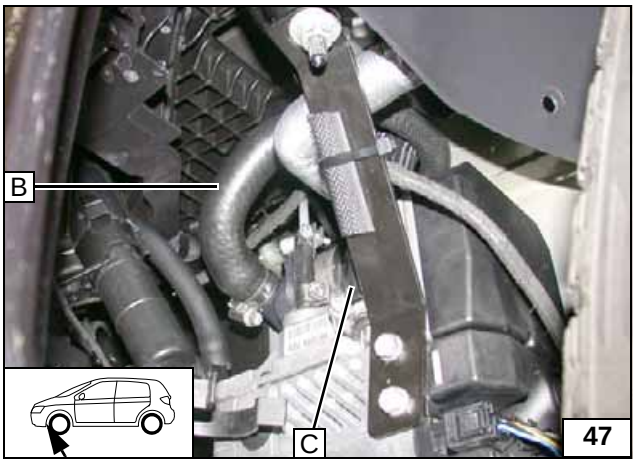

Combustion air silencer tied away for demonstration purposes.

Connecting heater

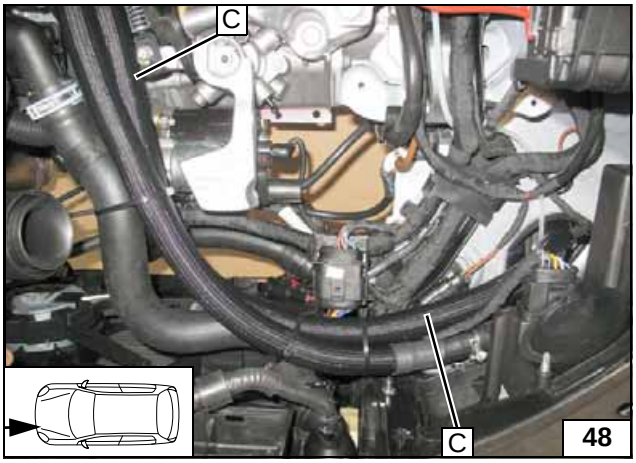

Routing in engine compartment

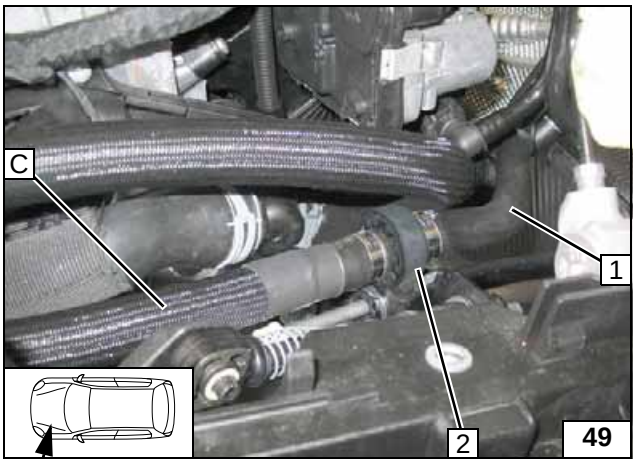

Insert black (sw) rubber isolator **2** in connecting position.

1 Hose on heat exchanger inlet

Connecting heat exchanger inlet

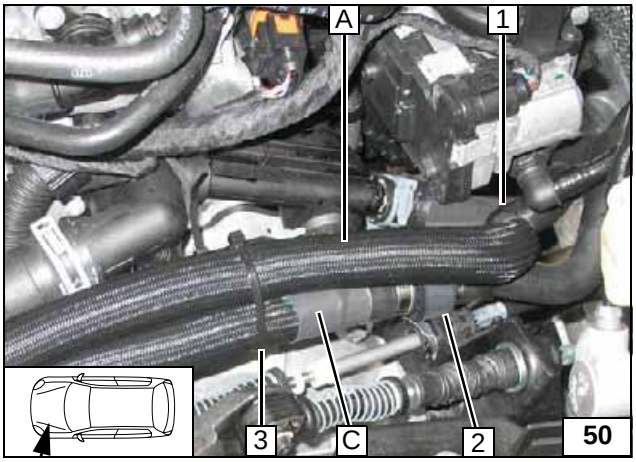

Align black (sw) rubber isolator **2** to bracket of gear change. Align hoses and fasten with cable tie **3** to original vehicle hose. Ensure sufficient spacing to neighbouring components, especially to gear change; correct if necessary.

1 Cable tie

Fastening hoses

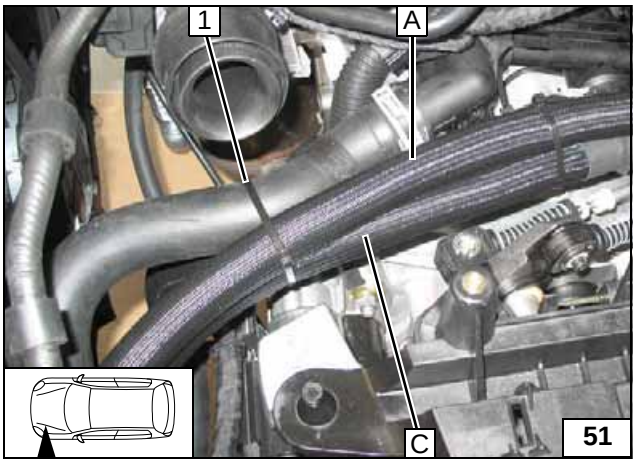

Align hoses and fasten with cable tie **1** to original vehicle hose.

Fastening hoses

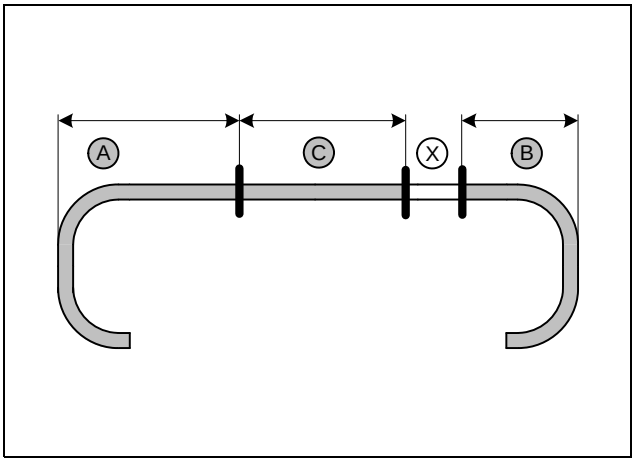

1.4 TSI

Discard section **X**.

A = 780
B = 120
C = 1000

Cutting hoses to length

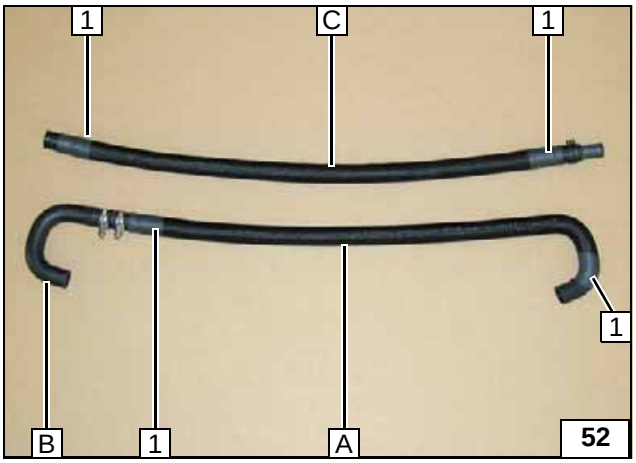

Push braided protection hoses onto hose **A** and **C**, cut to length and shrink.

1 Heat shrink plastic tubing [4x]

Premounting hoses

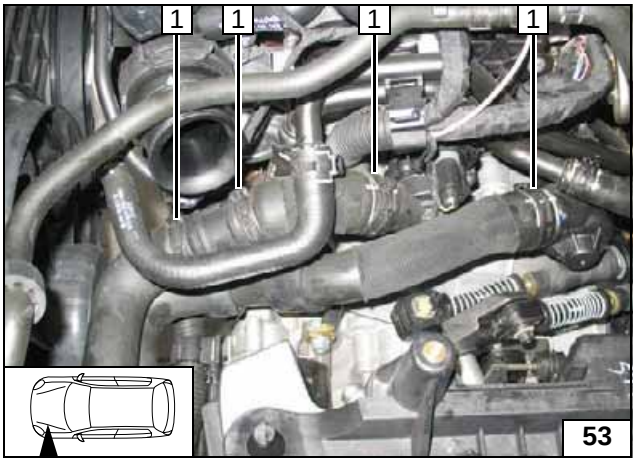

Rotate clamp lock **1** [4x] of engine!

Turning clamps

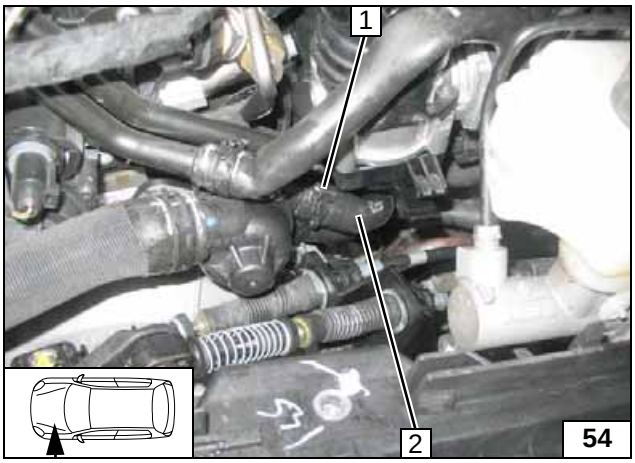

Pull off hose on engine outlet / heat exchanger inlet **2** on connection piece of engine outlet. Spring clip **1** will be reused.

Cutting point

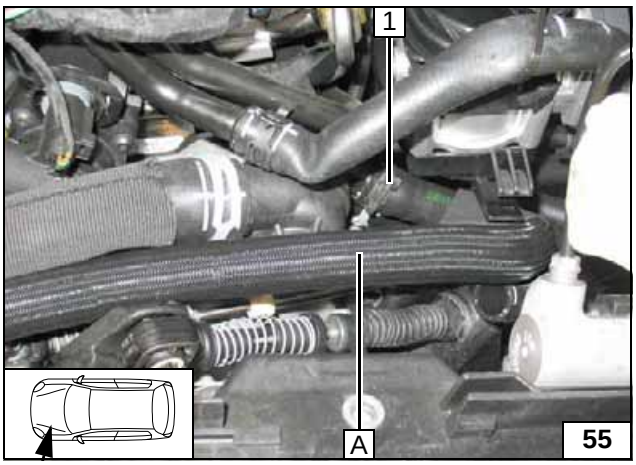

Install hose **A** to 180° elbow on connection piece of engine outlet.

1 Original vehicle spring clip

Connecting engine outlet

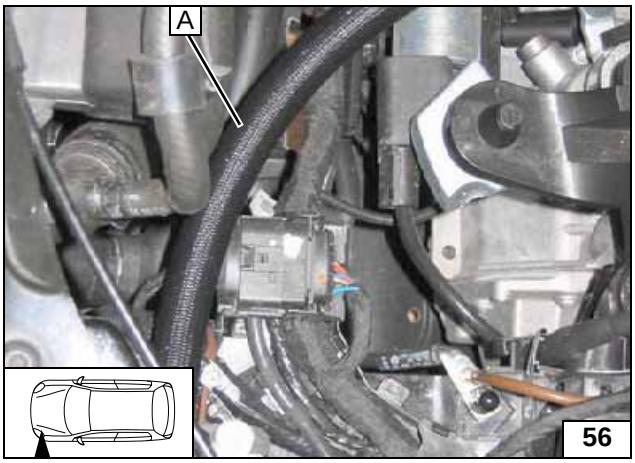

Routing in engine compartment

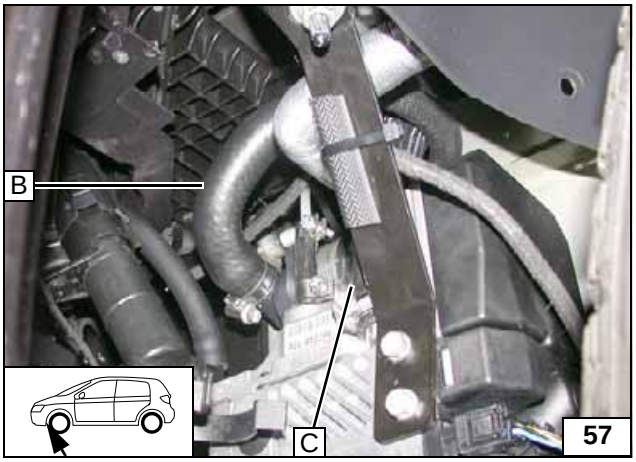

Combustion air silencer tied away for demonstration purposes.

Connecting heater



Routing in engine compartment

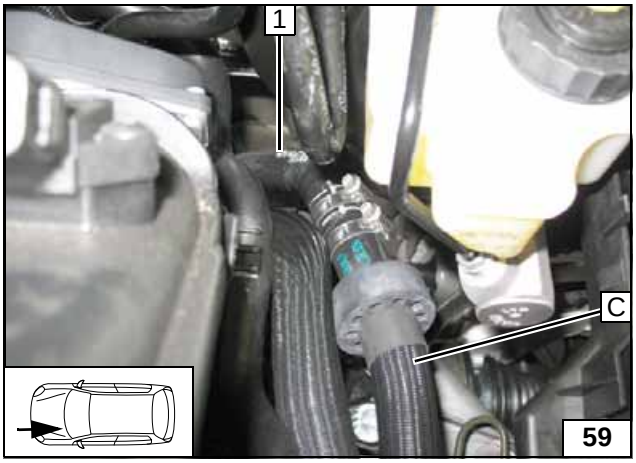

1 Hose on heat exchanger inlet

Connecting heat exchanger inlet

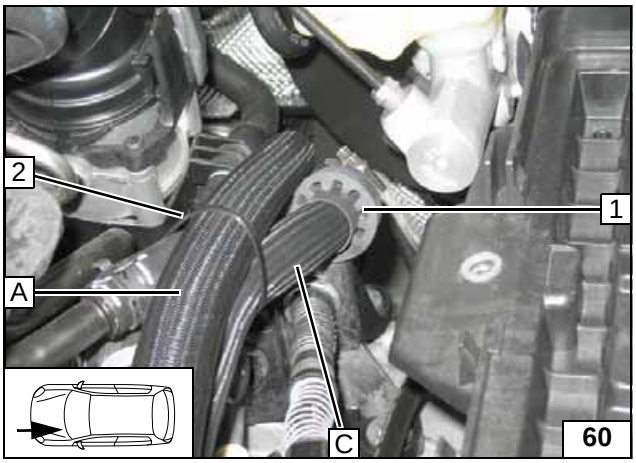

Align black (sw) rubber isolator **1** to bracket of gear change. Fasten hose **A** and **C** with cable tie **2** to original vehicle hose!

Routing in engine compartment

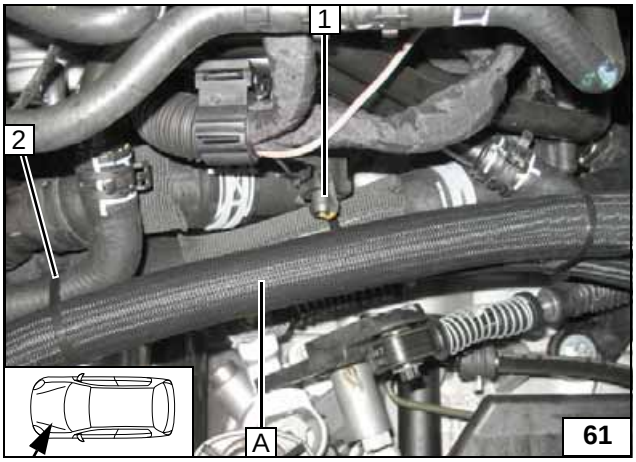

Align hoses and fasten with cable tie **2** to original vehicle hose. Ensure sufficient distance to connector **1**, correct if necessary.

Fastening hoses

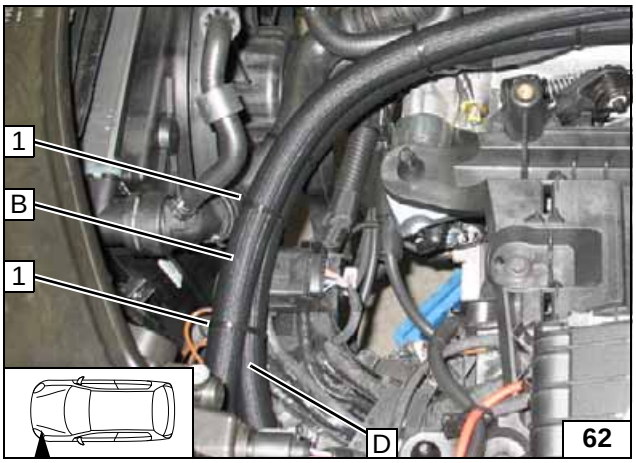

1 Cable tie [2x]

Fastening hoses



Exhaust gas

Align exhaust end section **1** and rubber isolator.

Installing wheel well trim

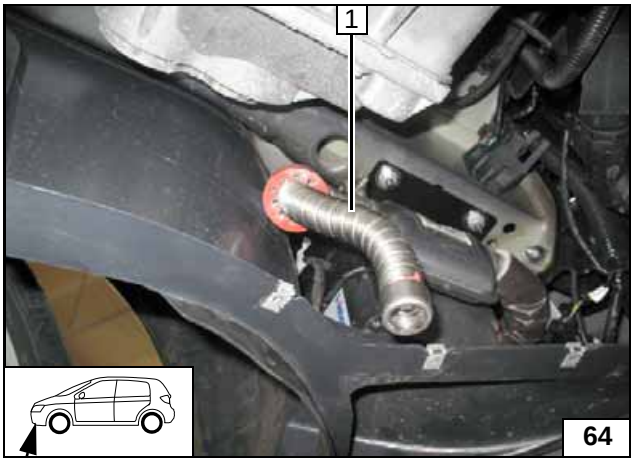

Install wheel well trim. Align rubber isolator **1** on wheel well trim. Ensure sufficient distance of exhaust end section from wheel well trim.

Aligning rubber isolator

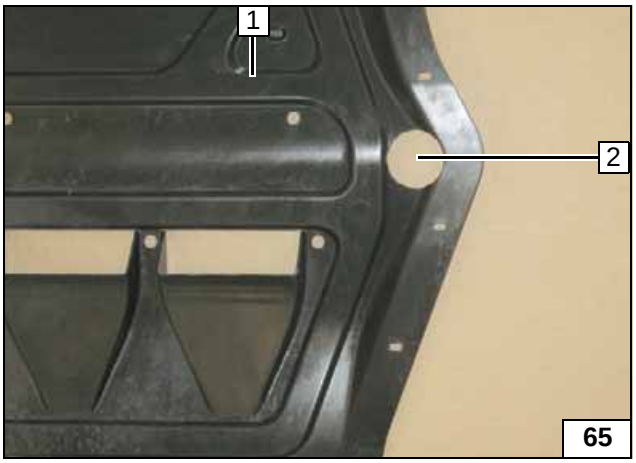

1 Underride protection
2 42 mm dia. hole

Hole in underride protection

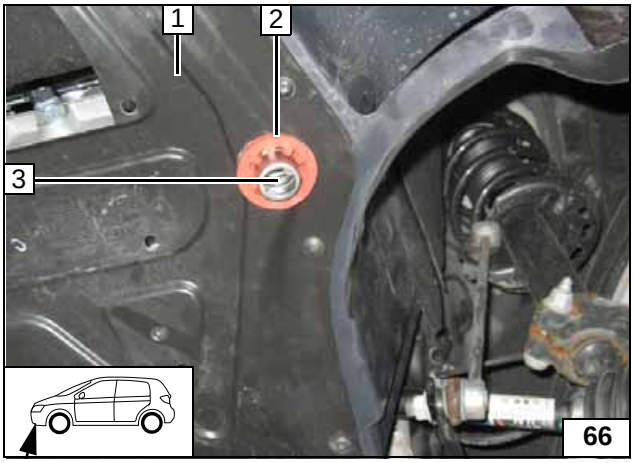

Align exhaust end section **3** flush on red (rt) rubber isolator **2**.

1 Underride protection

Mounting rubber isolator

Final Work

WARNING!
Reassemble the disassembled components in reverse order. Check all hoses, clamps and all electrical connections for firm seating. Insulate all loose wires and tie back.
Only use manufacturer-approved coolant. Spray the heater components with anti-corrosion wax (Tectyl 100K, Order No. 111329).

- **Connect the battery**
- **Fill and bleed the coolant circuit according to the vehicle manufacturer's specifications.**
- **Adjust digital timer, teach Telestart**
- **Make settings on A/C control panel according to the "Operating Instructions for End Customer".**
- **Place instruction signboard "Switch off parking heater before refuelling" in the area of the filler neck**
- **For initial start-up and function test, refer to installation instructions**

Webasto
Feel the drive

Webasto AG
Postfach 80
D-82132 Stockdorf / Germany
National Hotline: 01805 93 22 78
(14 Cent aus dem deutschen Festnetz)
Hotfax: 0395 5592 353

Operating Instructions for End Customer

Please remove page and add to the vehicle operating instructions.

Note:
We recommend matching the heating time to the driving time.
Heating time = driving time
Example:
For a driving time of approx. 20 min. (in one direction), we recommend not exceeding a switch-on time of 20 min.

If the summer/winter switch option has been installed, this must be switched in accordance with the time of year. The heater will then heat in the position Winter and in the position Summer it will only switch on the vehicle fan to ventilate the vehicle interior.

Before parking the vehicle, make the following settings:

On vehicles with anti-theft alarm, the passenger compartment monitoring system must be deactivated. For information on deactivation, please see the vehicle owner's manual.

Climatic

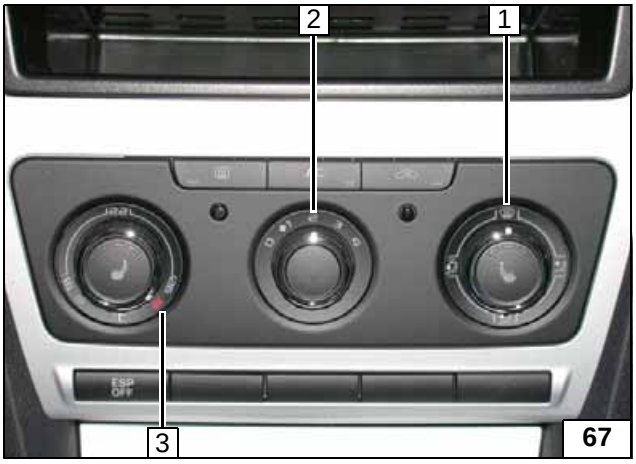

1 Direct air outlet toward windscreen
2 Set fan to level "1", or possibly "2"
3Set temperature to "max."

Climatron-ic

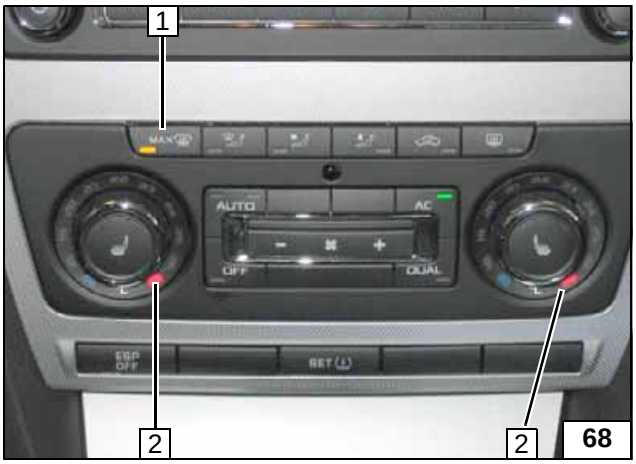

1 Direct air outlet toward windscreen
2 Set temperature on both sides to "HI".